



An Illinois Tool Works Company


INSTRUCTIONS **Air Filter Installation**

Aerostat XC

2257 North Penn Road
Hatfield, PA 19440

Phone: (215) 997-0590
Fax: (215) 997-3450

Publication 5200912
Rev. A, July, 2005

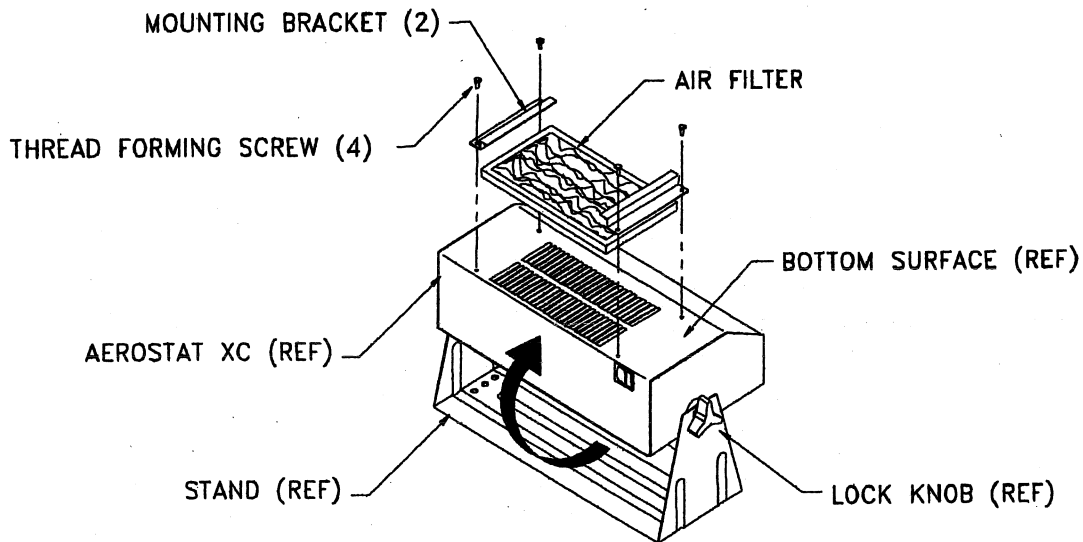

- 1) Unplug the Aerostat power cord from the wall outlet, or disconnect the cord from the rear inlet.
- 2) Loosen the side lock knobs and rotate the Aerostat upside down within the stand. Retighten the lock knobs.
- 3) Place the air filter brackets onto the bottom surface of unit and secure each bracket with (2) sheet metal screws. Tighten screws with a 1/4 hex driver.
- 4) Slide the air filter into the installed brackets from the rear of the unit.
- 5) Loosen the side lock knobs and rotate the Aerostat back to normal operating position. Retighten the lock knobs.
- 6) Reconnect the power cord and return the Aerostat to service.

Distributed by:
All-Spec Industries
Wilmington, NC

Ph: 800-537-0351
Fx: 800-379-9903

Web: www.all-spec.com
Email: sales@all-spec.com