



POWER RAIL

Item Numbers 8319-8324, 8326, 8327


Step 1

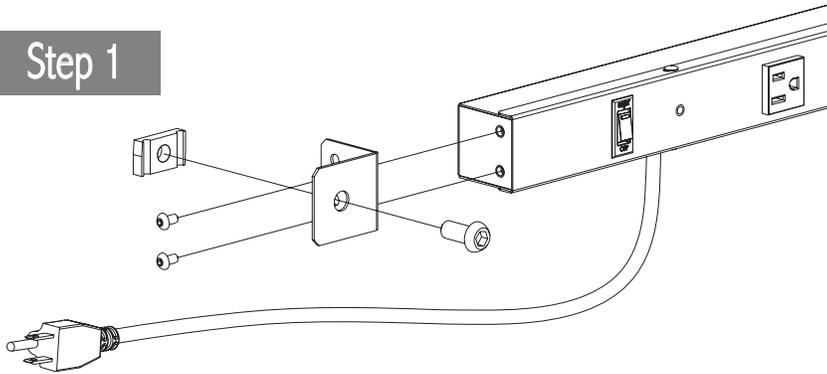

Steps 2-3

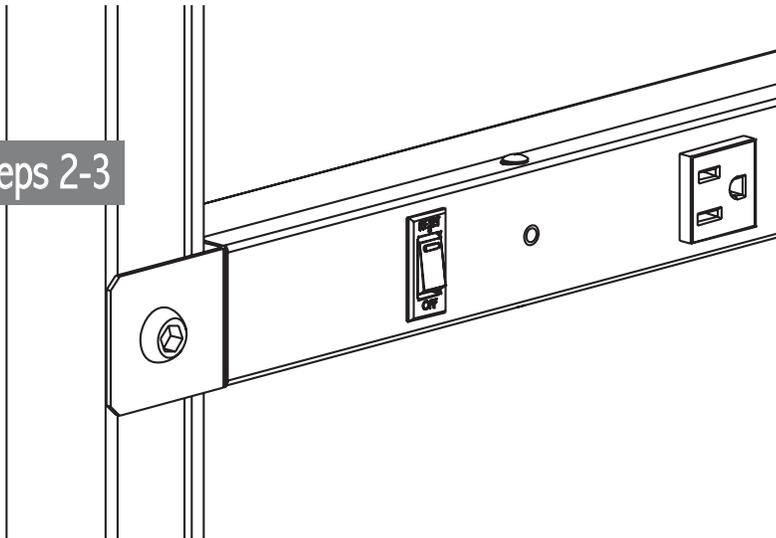

Step 4

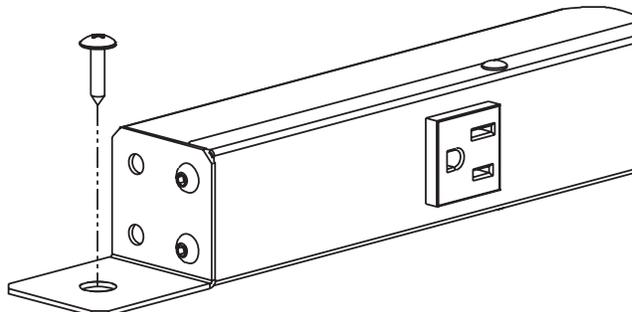

| PARTS AND HARDWARE | QUANTITY |
|---|----------|
| Power Rail | 1 |
| Basic Bolt | 2 |
| Basic Nuts | 2 |
| Wood Screws | 4 |
| Bracket- frame mount | 2 |
| Bracket-table mount | 2 |
| Bracket bolts | 4 |
| 7/32 Allen Wrench | 1 |
| Medium 1/8 Allen Wrench for bracket bolts | 1 |
| Other Items Needed (not included) | |
| Phillips head screwdriver or drill | |
| Tape measure | |
| Level | |

• **Note: Surface Mount method is not compatible with C-Leg Series workstations.**

1. To install Power Rail to an Upright or Frame, attach brackets to Power Rail as shown.
2. Insert a Basic Bolt into bracket. Add a Basic Nut and turn one revolution.
3. Install Power Rail at any height on your Uprights, Frame or Overhead Arms. Ensure the Power Rail is level before tightening.
4. Alternate mounting to RTW, Easy-Lift or existing work table, use bracket from Step 1 and attach directly to surface.