

# Botron B8506 Technical Data Sheet



## Features:

Botron's B8506 Wall Mount Test Station is an alternative to the B82450, for those that need wall hanging systems. It comes standard with a bright yellow back plate, a single solid aluminum foot plate and B8211 tester.

## PROPERTIES

## SPECIFICATIONS

Wall Mount:	Bright Yellow Wall Plate
Floor Plate:	Aluminum
Plate size:	7.5" x 15"
Tester:	B8211
Battery:	9 volt
LEDs:	(3) Low, OK and Hi
Alarm:	Internal buzzer
Test Range:	800k- 100 MegOhm
Testing - Wrist:	705k - 10.5 MegOhm
Testing - Footwear:	705k - 105 MegOhm
External Power:	AC/DC (optional)


Wrist strap and footwear ranges are independently set +/- 5%

## PART NUMBERS

B8506 Wall Mount Test Station  
B8506P Replacement Plate 7" x 18"

## Product Notes and Features

- Uses 9 Volt Battery
- Solid Aluminum Foot Plate
- LED Light Indicators
- Low Battery Indicator

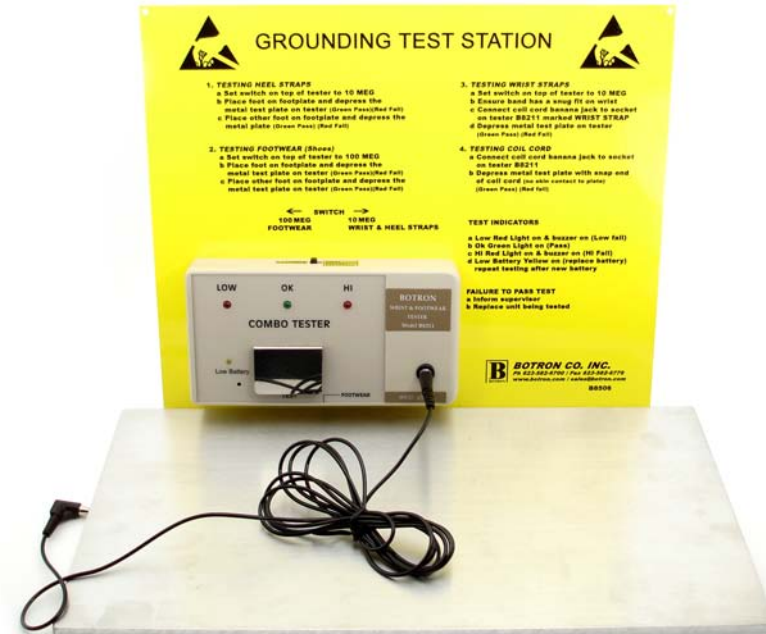

**Distributed by:** All-Spec  
**Ph:** 800-537-0351, **Fx:** 800-379-9903  
**Email:** [sales@all-spec.com](mailto:sales@all-spec.com)  
**Web Site:** [www.all-spec.com](http://www.all-spec.com)

Botron Company Inc. | 325 W. Melinda Ln Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

**Disclaimer.** All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user. The statements herein shall have no force or effect.

## OPERATION

Insert 9 volt battery into tester.

With velcro strips, mount the B8211 onto wall plate.

Connect wires to tester and foot plate.

Plug in banana jack from wrist strap and touch plate. To test coil cords, Unplug from wrist strap. Plug banana jack into unit and with snap in hand, touch coil head to touch plate and press down.

For footwear, stand on floor plate and press touch plate.

**Distributed by:** All-Spec  
**Ph:** 800-537-0351, **Fx:** 800-379-9903  
**Email:** [sales@all-spec.com](mailto:sales@all-spec.com)  
**Web Site:** [www.all-spec.com](http://www.all-spec.com)

Botron Company Inc. | 325 W. Melinda Ln Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

**Disclaimer.** All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user. The statements herein shall have no force or effect.